


WE DO NOT RECOMMEND THESE FREEZE RELIEF SETUPS  
(Pipe size listed on each pipe)

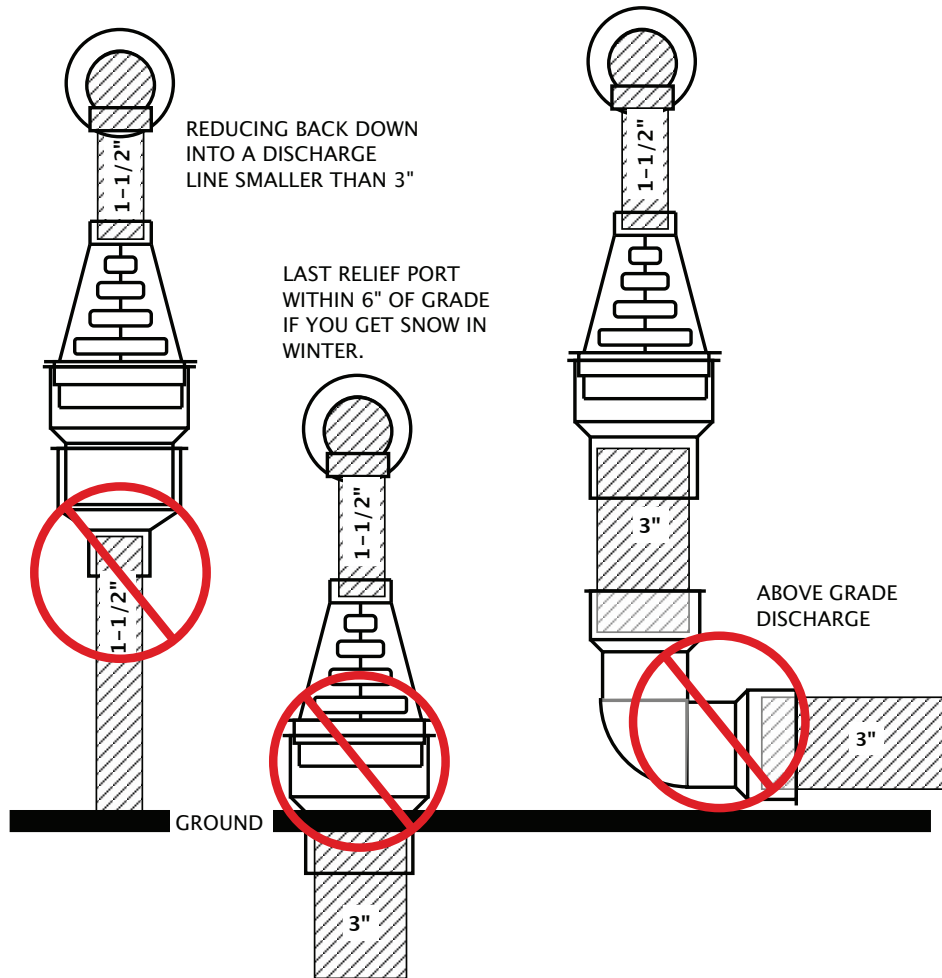


## Freeze Relief FR1K-SCH40


THE FREEZE RELIEF (SCHEDULE 40) KIT INCLUDES ONE (1) EACH:





1-1/2" COLLAR

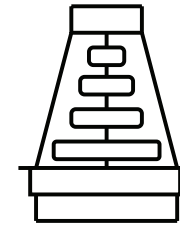


FREEZE RELIEF

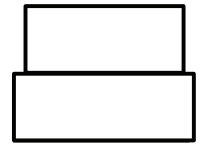

4" SDR 35 TO  
4" SCH 40 ADAPTER

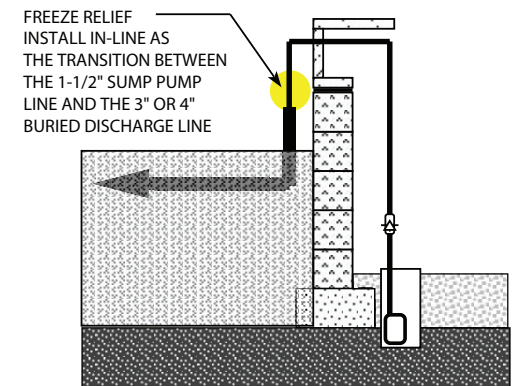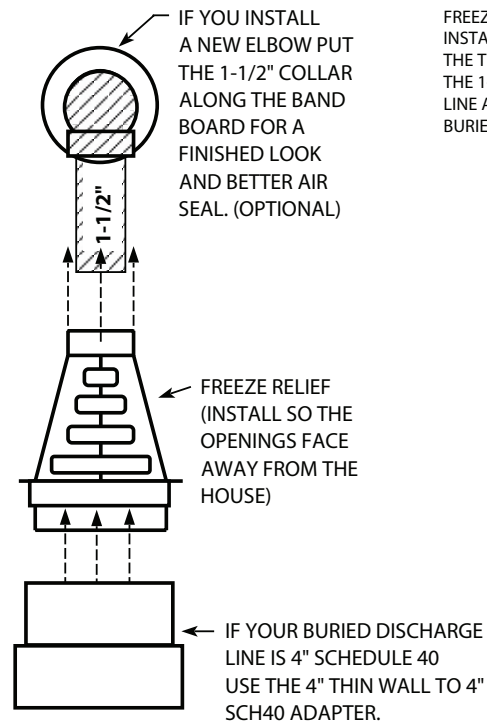

RECOMMENDED FREEZE RELIEF SET UP OPTIONS  
(Pipe size listed on each pipe)

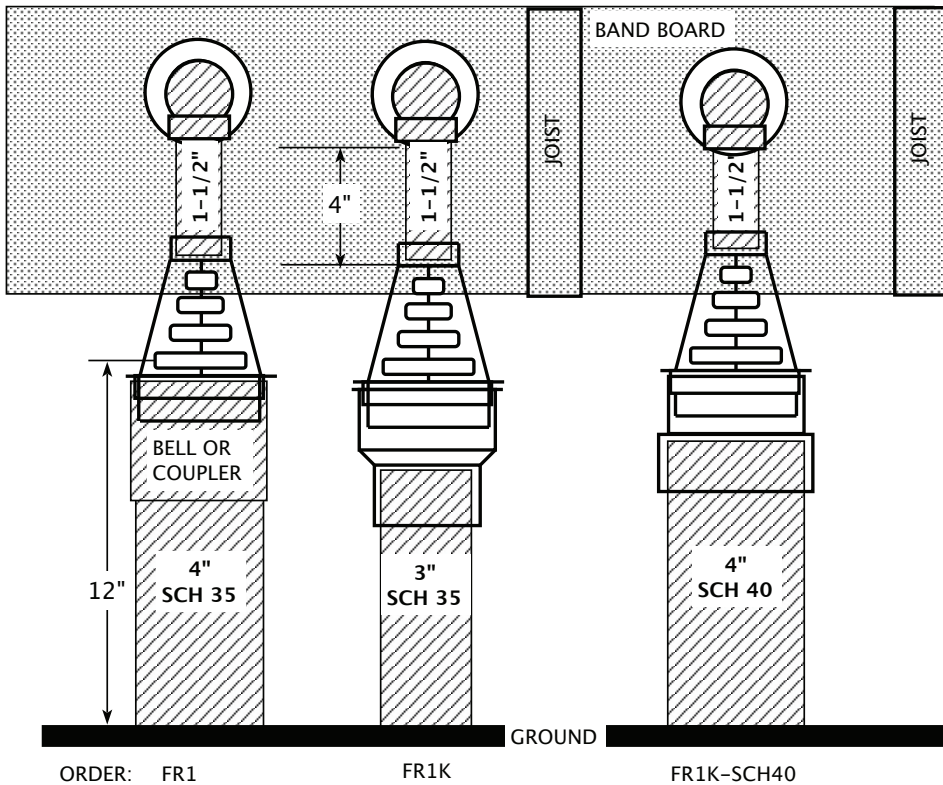

FREEZE RELIEF HAS BEEN DESIGNED TO GIVE YOUR SUMP PUMP SYSTEM A SPILLWAY FOR WATER TO ESCAPE IN CASE THE BURIED DISCHARGE BECOMES BLOCKED. IN COLDER CLIMATES, THE GREATER THE CLEARANCE BETWEEN THE RELIEF VENTS AND THE GROUND THE BETTER.

WE RECOMMEND:

1. INSTALLING THE TOP OF THE FREEZE RELIEF ABOUT 4" BELOW ELBOW.
2. INSTALLING THE FREEZE RELIEF WITH 12" OR MORE OF CLEARANCE BETWEEN THE LOWEST RELIEF VENT AND THE GROUND.

